

AIRPORT DIAGRAM


BROWNSVILLE/SOUTH PADRE ISLAND INTL (BRO)
AL-61 (FAA)
BROWNSVILLE, TEXAS

ATIS
128.55
BROWNSVILLE TOWER ★
118.9 239.3
GND CON
121.9

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBCK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

SC-3, 11 JUN 2026 to 09 JUL 2026

SC-3, 11 JUN 2026 to 09 JUL 2026

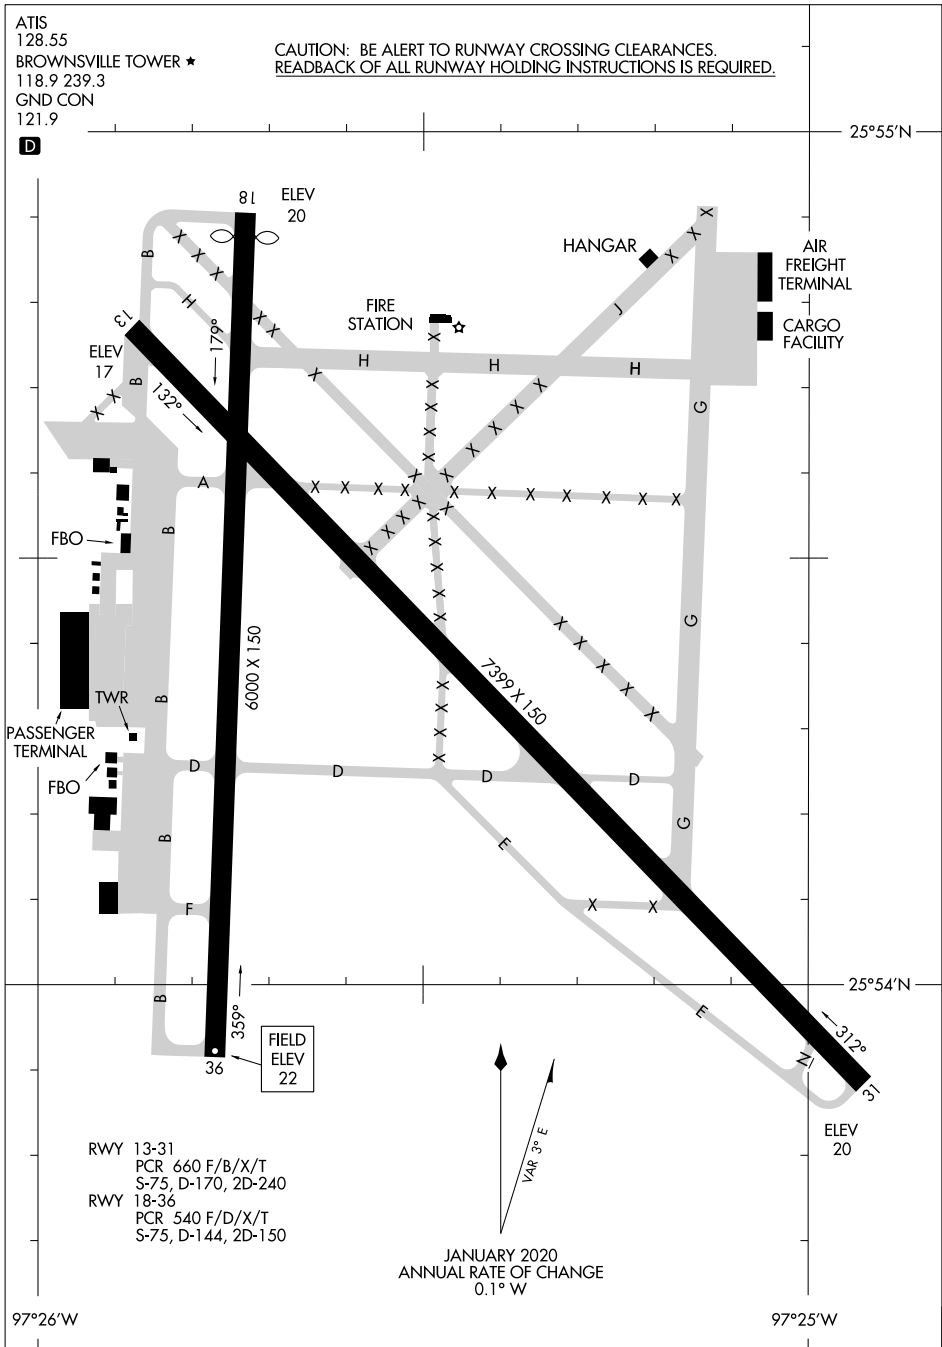

RWY 13-31
PCR 660 F/B/X/T
S-75, D-170, 2D-240

RWY 18-36
PCR 540 F/D/X/T
S-75, D-144, 2D-150

VAR 3° E
JANUARY 2020
ANNUAL RATE OF CHANGE
0.1° W

97°26'W

97°25'W

AIRPORT DIAGRAM

BROWNSVILLE, TEXAS
BROWNSVILLE/SOUTH PADRE ISLAND INTL (BRO)