


LOC/DME I-CVN 108.9 Chan 26	APP CRS 037°	Rwy Ldg TDZE Apt Elev 7200 4205 4216
---	------------------------	--

ILS or LOC RWY 4

CLOVIS RGNL (CVN)

DME required. NA Circling NA to Rwys 8 and 26. For inop ALS, increase S-LOC 4 Cats C/D visibility to 1 SM.		MALSR AS	MISSED APPROACH: Climb to 4700 then climbing right turn to 6000 direct TXO VORTAC and hold.
AWOS-3PT 135.375	CANNON APP CON 118.425 352.1	UNICOM 122.8 (CTAF)	

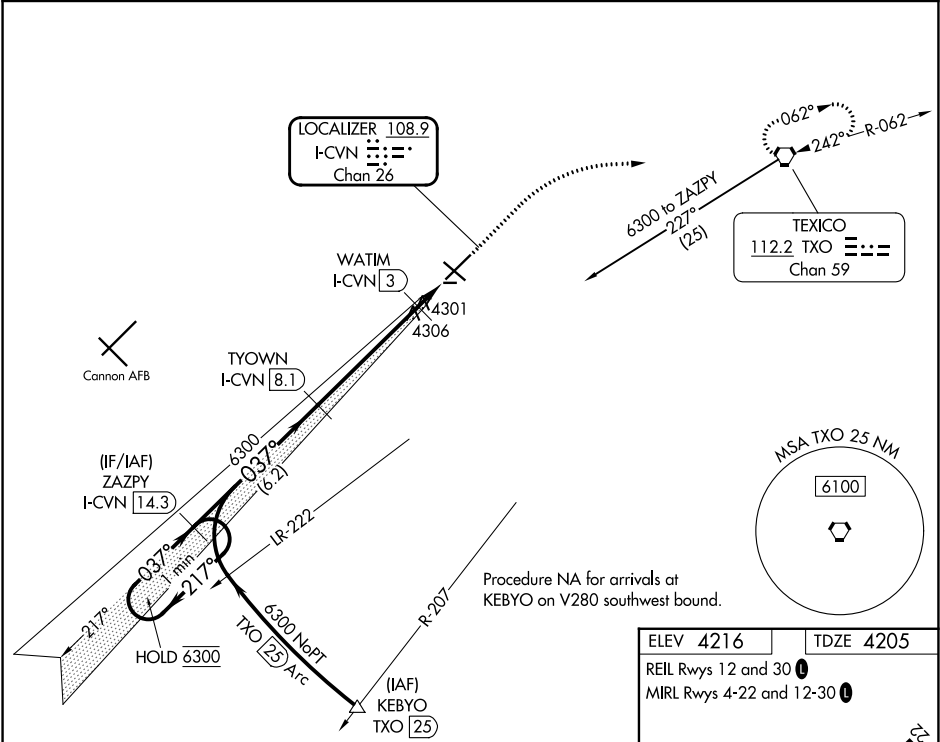

Use I-CVN DME when on the localizer course.					4700	6000	TXO
One Minute Holding Pattern					ZAZPY I-CVN 14.3	TYOWN I-CVN 8.1	

